Kinemetrics

EpiSensor2

Strong Motion Accelerometer

User's Manual

Revision 2.01

June 2015

KINEMETRICS

Kinemetrics, Inc.
Pasadena, CA USA
www.kinemetrics.com

Table of Contents

No User Serviced Parts/Electrical Safety Notice.....Page 3

Introduction and Product Description.....Page 4

Electrical Connections.....Pages 5-6

EpiSensor2 Cabling.....Pages 7-10

Operational Control of the EpiSensor2.....Pages 11-14

Setup and Initial Operation.....Page 15

Operational Details.....Pages 16-18

RS-232 Command Line Interface.....Pages 19-22

Shipping and Handling.....Page 23

Contact Kinemetrics.....Page 23

EpiSensor2 Specifications.....Pages 24-26

No User-Serviced Parts

The EpiSensor2 is a self-contained seismic accelerometer. There is no reason to open the sensor package, or to modify the electronics or sensor elements contained within it. There are no internal manual adjustments to make, nor are there any user-serviced parts within the sensor. Opening and/or modifying the sensor is unnecessary, and doing so will void the instrument's warranty.

Electrical Safety Notice

As with all electrical instruments, potentially lethal potentials can be present on all metal surfaces, including conductors within any cables. Proper grounding of these elements is important to minimize these risks. The user of this product is responsible for its installation and operation in a safe manner, and in accordance with all local requirements for electrical safety.

Introduction and Product Description

The EpiSensor2 is an advanced force-balance, triaxial accelerometer that builds upon the outstanding record of its predecessor, the EpiSensor (the world's first seismological-grade strong motion accelerometer). The high dynamic range of the EpiSensor2 allows both weak and strong motion recording from a single sensor.

The EpiSensor2 provides a broad set of electronically-controlled operational modes, including range-switching (allowing 4g, 2g, 1g, 0.5g, and 0.25g peak, full-scale ranges), Offset removal (AUTOZERO mode), and calibration. These modes can be controlled remotely, either via the digitizer (using selected enable lines) or via an RS-232 command line interface. The sensor also provides a pushbutton switch for local control. This allows an on-site user to select sensor full-scale range and AUTOZERO state (ON or OFF).

An important feature of the EpiSensor2 is its very low quiescent power consumption: under 350 mW. The sensor consumes 60% to 70% lower power than competing strong motion accelerometers. This makes it ideal for remote, battery-powered applications.

The EpiSensor2, and its cabling, are designed for direct connection to Quanterra Q330-series digitizers, as well as digitizers from the Kinemetrics "Rock" series.

The EpiSensor2 module, and some of its features, are shown in Figure 1.

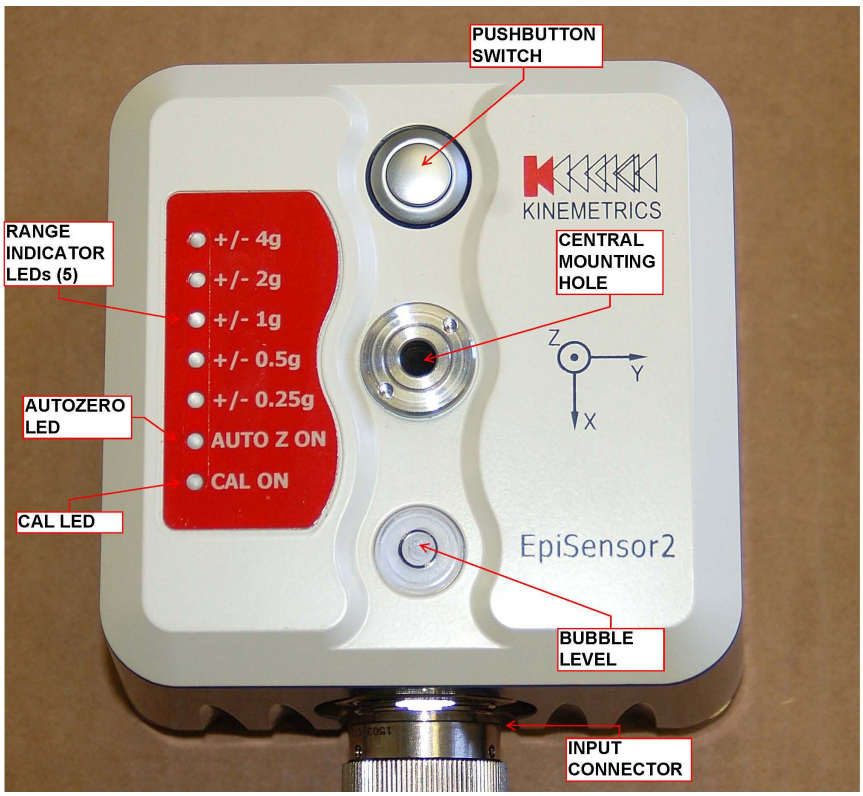

Figure 1. EpiSensor2 module.

Electrical Connections

The EpiSensor2 contains a Souriau connector on its side. The connections supported by this receptacle are shown in Table 1.

851-07C16-26P50-A7-44 Receptacle Pin Designator	Signal	Notes
A	**Z Acceleration +**	
B	**Z Acceleration -**	
C	**Shield Connection**	Connected to ANALOG Ground
D	**Y Acceleration +**	
E	**Y Acceleration -**	
F	**Shield Connection**	Connected to ANALOG Ground
G	**X Acceleration +**	
H	**X Acceleration -**	
J	**Shield Connection**	Connected to ANALOG Ground
K	**Z Channel Range Indicator**	
L	**Y Channel Range Indicator**	
M	**X Channel Range Indicator**	
N	**ANALOG Ground**	
P	**CAL Enable Line (Logic Level)**	
R	**AUTOZERO Enable Line (Logic Level)**	
S	**RESET Enable Line (Logic Level)**	
T	**RANGE Enable Line (Logic Level)**	
U	**Enable Return**	
V	**CAL Input +**	
W	**CAL Input -**	
X	**RS-232 TX**	

Y	**RS-232 RX**	
Z	**RS-232 GND**	
a	**Power Bundle Shield/CASE Ground**	
b	**Input Power + (9-36V)**	
c	**Input Power Return**	

Table 1. Connections to sensor through Souriau 851-07C16-26P50-A7-44 receptacle.

Note that the shield connections (pins C, F, and J) are provided for redundancy, in specially-designed cables. Within the standard sensor cabling, these connections are not propagated into the cables, at the sensor end. Rather, the shield connections are made (only) at the digitizer end of the cable.

The digital enable lines (P, R, S, T, relative to U) are fully-isolated from other lines in the system. They operate over an approximate 2V to 10V input range. The RS-232 interface (on pins X, Y, and Z) is fully isolated as well.

The power inputs (pins b and c) require voltage range of 9-36V at the sensor input. This galvanically-isolated input has reverse-polarity protection, as well as overcurrent protection.

The ANALOG ground line (Pin N) is the common mode voltage reference for the differential signal lines (pins A-B, D-E, and G-H). It also serves as the reference ground for the range voltage signals (pins K, L, and M).

The calibration (CAL) input (pins V and W) is differential, with a +/-15V range. The common mode reference for these signals is ANALOG ground (pin N).

EpiSensor2 Cabling

The standard cable for the EpiSensor2 is shown in Figure 2. This 6 meter long cable (PN: “Epi2.0 320001-6”) connects to the sensor and to the digitizer. The 10-shell plug in the Y-extension, at the digitizer end, is dedicated to the isolated RS-232 connection.

Kinemetrics can also supply a simple RS-232 connection cable (PN “Epi2.0 320002-1.5). It connects, as shown in Figure 3, to the 10-shell plug.

Among other cable options are ones without the RS-232 takeout. This can be used when RS-232 control is not desired, or when the cable run is beyond the practical limit of RS-232 communications (typically 15 meters).

Kinemetrics can also supply “pigtailed” (connectorless) cables. The maximum cable length is 125 meters, owing to limitations related to digitizer power sourcing (mainly its voltage) and series resistance in the power lines contained within the cabling. Operating power for the sensor is generally expected to come from the digitizer (via pins b and c).

The connections within the standard cable (PN: “Epi2.0 320001-6.”) are listed in Table 2.

For users wishing to create their own cables, Kinemetrics can supply a standard, right-angle, solder-cup, plug (with cable clamp) that will connect directly to the EpiSensor2. The commercial part number for this item is Souriau 851-08EC16-26S50-44. This plug, and the connection details in Table 1, are all that users will need to make connection to the sensor.

Please contact Kinemetrics to discuss specific cable requirements.

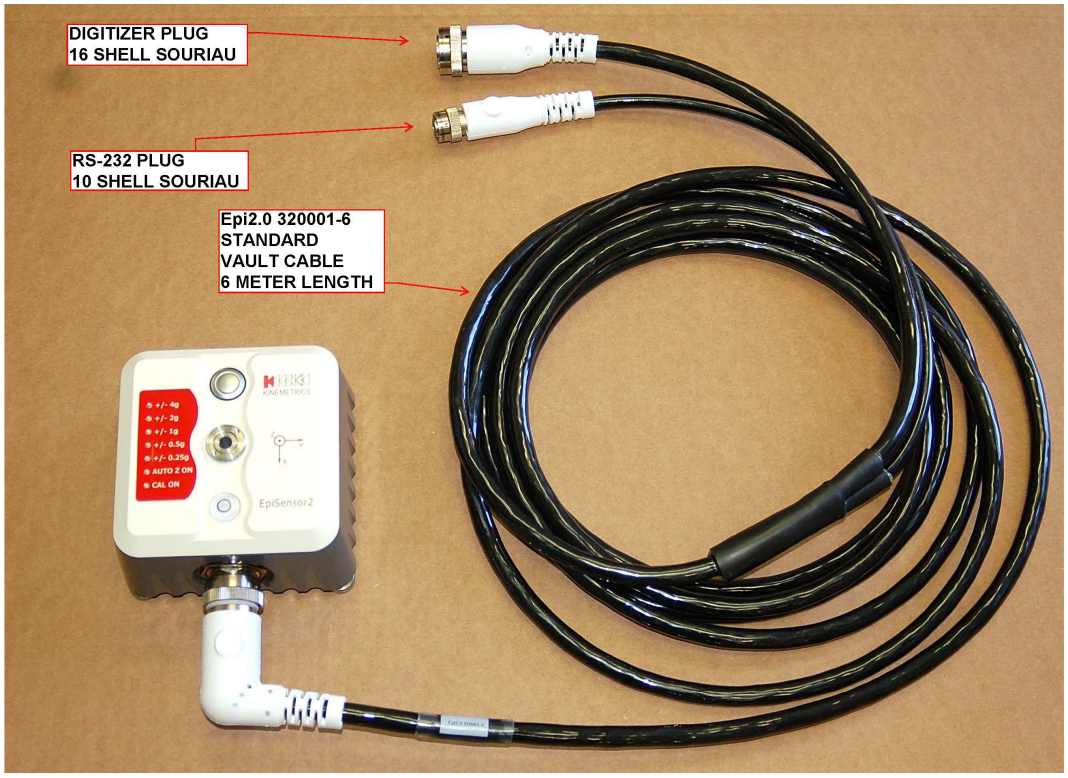

Figure 2. Sensor with standard cable.

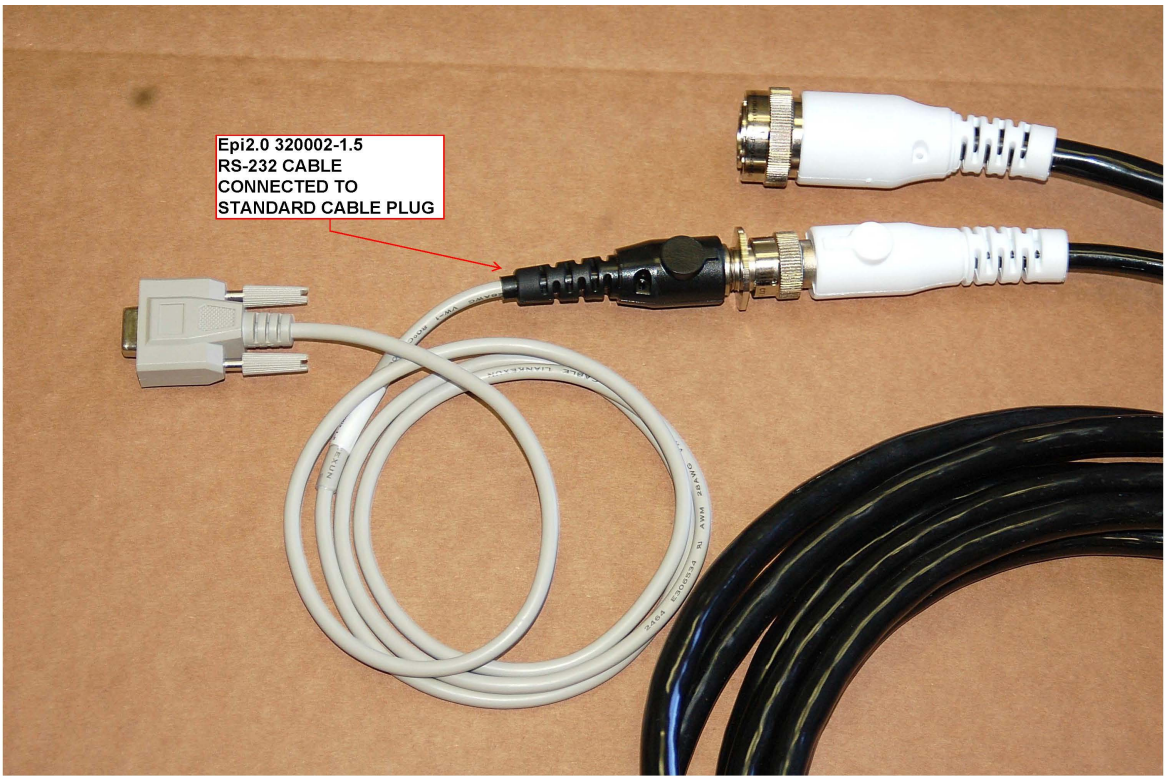

Figure 3. Standard cable with RS-232 cable connected.

Inbound End: Sensor Connector			**Outbound End: Recorder Connector**		**Outbound End: RS-232 Connector**	
851-08E16-26S50-44, RA Plug	**Conductors**	**Signal**	**851-06E16-26P50-44 Plug**	**Conductors**	**851-06E10-98S50-44 Plug**	**Conductors**
A	Wire 1/Pair 1 (SB): White	**Z Acceleration +**	**A**	Wire 1/Pair 1 (SB): White		
B	Wire 2/Pair 1 (SB): Black	**Z Acceleration -**	**B**	Wire 2/Pair 1 (SB): Black		
C	NC	**Signal Bundle Shield**	**C**	Signal Bundle Shield Drain Wire		
D	Wire 1/Pair 2 (SB): White	**Y Acceleration +**	**D**	Wire 1/Pair 2 (SB): White		
E	Wire 2/Pair 2 (SB): Brown	**Y Acceleration -**	**E**	Wire 2/Pair 2 (SB): Brown		
F	NC	**Control Bundle Shield**	**F**	Control Bundle Shield Drain Wire		
G	Wire 1/Pair 3 (SB): White	**X Acceleration +**	**G**	Wire 1/Pair 3 (SB): White		
H	Wire 2/Pair 3 (SB): Red	**X Acceleration -**	**H**	Wire 2/Pair 3 (SB): Red		
J	NC		**J**	NC		
K	Wire 1/Pair 5 (CB): White	**Z Channel Range Indicator**	**K**	Wire 1/Pair 5 (CB): White		
L	Wire 2/Pair 5 (CB): Yellow	**Y Channel Range Indicator**	**L**	Wire 2/Pair 5 (CB): Yellow		
M	Wire 1/Pair 6 (CB): White	**X Channel Range Indicator**	**M**	Wire 1/Pair 6 (CB): White		
NC; wire floats	Wire 2/Pair 6 (CB): Green		**NC; wire floats**	Wire 2/Pair 6 (CB): Green		
N	Wire 1/Pair 4 (SB): White	**ANALOG Ground**	**N**	Wire 1/Pair 4 (SB): White		
NC; wire floats	Wire 2/Pair 4 (SB): Orange		**NC; wire floats**	Wire 2/Pair 4 (SB): Orange		
P	Wire 1/Pair 7 (CB): White	**CAL Enable Line (Logic Level)**	**P**	Wire 1/Pair 7 (CB): White		
R	Wire 2/Pair 7 (CB): Blue	**AUTOZERO Enable Line (Logic Level)**	**R**	Wire 2/Pair 7 (CB): Blue		

S	Wire 1/Pair 8 (CB): White	**RESET Enable Line (Logic Level)**	**S**	Wire 1/Pair 8 (CB): White		
T	Wire 2/Pair 8 (CB) :Violet	**RANGE Enable Line (Logic Level)**	**T**	Wire 2/Pair 8 (CB) :Violet		
U	Wire 1/Pair 9 (CB): White	**Enable Return**	**U**	Wire 1/Pair 9 (CB): White		
V	Wire 1/Pair 10 (CB): Black	**CAL Input +**	**V**	Wire 1/Pair 10 (CB): Black		
W	Wire 2/Pair 10 (CB): Brown	**CAL Input -**	**W**	Wire 2/Pair 10 (CB): Brown		
X	Wire 1/Pair 11 (CB): Black	**RS-232 TX**	**X**	NC	**A**	Triad Red Wire
Y	Wire 2/Pair 11 (CB): Red	**RS-232 RX**	**Y**	NC	**B**	Triad Black Wire
Z	Wire 2/Pair 9 (CB): Gray	**RS-232 GND**	**Z**	NC	**C**	Triad White Wire
a	1 M to Power Bundle Shield Drain Wire	**Power Bundle Shield/CASE Ground**	**a**	Power Bundle Shield Drain Wire		
b	Wire 1/Pair 12 (PB): Black	**Input Power + (9-36V)**	**b**	Wire 1/Pair 12 (PB): Black		
c	Wire 2/Pair 12 (PB): Orange	**Input Power Return**	**c**	Wire 2/Pair 12 (PB): Orange		
					D	Triad Shield Drain Wire
					E	NC
					F	NC

Table 2. Connection details of standard 6 meter cable.

Operational Control of the EpiSensor2

The sensor can be controlled in multiple ways: button pushing (local), digitizer enable lines (remote) and RS-232 (local and/or remote). Using either of these, the operator can control the full-scale range, and AUTOZERO state, of the sensor. Using the digitizer or RS-232 interfaces, the user can exercise a complete calibration (CAL) capability. Using a dedicated digital line connected to the digitizer, the operator can issue a RESET to the sensor that is similar to a Power-ON-RESET. Finally, the user can use the RS-232 interface to communicate with the sensor to receive a variety of sensor-specific information (serial numbers, scalar response values, etc.). The RS-232 command line menu is discussed further below.

Full-Scale Ranges

The EpiSensor2 supports five digitally-selectable ranges (with nominal scale factors):

Range 5: +/-4g (5 V/g)
Range 4:+/-2g (10 V/g)
Range 3: +/-1g (20 V/g)
Range 2: +/-0.5g (40 V/g)
Range 1: +/-0.25g (80 V/g)

There are red LEDs that show the current range. This range is stored in non-volatile memory. The sensor range will be maintained upon a power-on- reset (POR) event. There are three methods for setting the range:

Button Pushing

1. Press the button once for about 1 second (0.2 to 2 second acceptable window). This will light the LEDs and "enable" the system
2. Each subsequent button push changes the range by one step in a cyclical fashion. ***Wait about 5 seconds between subsequent pushes.***
3. After 20 seconds of inactivity, the LEDs will shut off and the system will be disabled

Digitizer Enable Lines (Q330 used for this description)

1. The sensor monitors the Q330's Generic Enable line 3 ("AUX 2").
2. A pulse-length encoding scheme is used to select the range
    1. Asserting the line for between 4.5 and 5.5 seconds places the sensor range at +/-4g
    2. Asserting the line for between 3.5 and 4.5 seconds places the sensor range at +/-2g
    3. Asserting the line for between 2.5 and 3.5 seconds places the sensor range at +/-1g
    4. Asserting the line for between 1.5 and 2.5 seconds places the sensor range at +/-0.5g
    5. Asserting the line for between 0.5 and 1.5 seconds places the sensor range at +/-0.25g

RS-232 Command Line Interface

1. At the MAIN prompt, enter “enable12345” to allow access to command menus
2. Type “OPERATE” to select OPERATE page
3. At the OPERATE prompt, type command to select range:
    1. “4g” for +/-4g
    2. “2g” for +/-2g
    3. “1g” for +/-1g
    4. “0.5g” for +/-0.5g
    5. “0.25g” for +/-0.25g

Range Signaling

The EpiSensor2 feeds a range-dependent signal into the the low resolution mass position channels of the Q330 or Rock digitizers:

5V (50 counts) for +/-4g range
4V (40 counts) for +/-2g range
3V (30 counts) for +/-1g range
2V (20 counts) for +/-0.5g range
1V (10 counts) for +/-0.25g range

In addition, the Episensor2 outputs a coded range signal to each of the channels' SIGNAL line:
5 pulses for +/-4g range
4 pulses for +/-2g range
3 pulses for +/-1g range
2 pulses for +/-0.5g range
1 pulse for +/-0.25g range

This signal is output at power-ON, following a RESET event, and following any range-setting activity. Typical pulses, for 4g range, are shown in Figure 4.

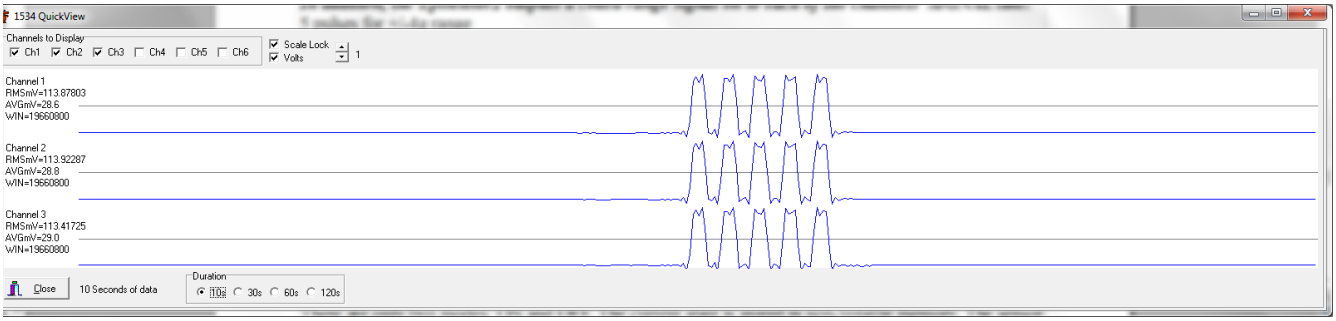

Figure 4. Pulse-train range signal for +/-4 g range.

AUTOZERO

The EpiSensor2 has an autozero capability that will remove DC-offsets from the signal, up to an acceleration-equivalent limit of +/-100 mg. Autozero operates simultaneously on all three channels. There are only two modes: ON and OFF. The current state is stored in non-volatile memory. The sensor will enter the appropriate state after a POR event.

There are three ways to control the autozero state:

Button Pushing

1. Press the button once for about 1 second (0.2 to 2 second acceptable window). This will light the LEDs and "enable" the system
2. Push and hold the button for between 5 and 10 seconds to ***toggle*** the AUTOZERO ON/OFF. A green LED will be lit when AUTOZERO is ON
3. After 20 seconds of inactivity, the LEDs will shut off and the system will be disabled

Q330 Enable Lines (Q330 used for this description)

1. The sensor monitors Q330 Generic Enable line 1.
2. A pulse-length encoding scheme is used to set the AUTOZERO state:
    1. Asserting the line for between 1 and 3 seconds (2 seconds nominal) turns AUTOZERO ON
    2. Asserting the line for between 4 and 6 seconds (5 seconds nominal) turns AUTOZERO OFF

RS-232 Command Line Interface

1. At the MAIN prompt, enter "enable12345" to allow access to command menus
2. Type "OPERATE" to select OPERATE page
3. At the OPERATE prompt, type command to select range:
    1. "AUTOZEROON" turns ON Autozero
    2. "AUTOZEROOFF" turns OFF Autozero

CAL (Calibration)

The EpiSensor2 allows the injection of external calibration signals into the sensors. All three axes are excited simultaneously. There is a green LED that is lit when CAL is ENABLED.

There are two ways to control the CAL state.

Q330 Enable Lines (Q330 used for this description)

1. The sensor monitors Q330 CAL_ENABLE line
2. Asserting the line enables CAL. Signals presented at the CAL+/- input pins of the connector will be injected into the calibration circuit of the sensor
3. De-asserting the line disables CAL
4. The sensor operates seamlessly with the standard "Start/Stop Sensor Calibration" commands in the Q330 control software (Willard).

RS-232 Command Line Interface

1. At the MAIN prompt, enter "enable12345" to allow access to command menus
2. Type "OPERATE" to select OPERATE page
3. At the OPERATE prompt, type command to select range:
    1. "CALON" enables CAL
    2. "CALOFF" disables CAL

RESET

Asserting the Q330 Generic Enable 2 ("AUX 1") line rests the sensor. It effect is equivalent to a Power-ON-RESET (POR) event, without interrupting the power.

Setup and Initial Operation

The EpiSensor2 should be deployed on a firm, stable surface. The sensitive horizontal directions (X and Y) are aligned with the sides of the sensor. The sensor should be leveled using the threaded adjustment feet and the bubble level. One of these feet is shown in Figure 5. Following leveling, the feet can be locked by tightening the lock nut up against the bottom of the sensor (finger tight only!). The central bolt hole can be used to anchor the sensor to the mounting surface. This can use bolts and a threaded insert in the surface, or a threaded stud that passes up from the surface to be captured with a nut at the top of the sensor.

Connect the sensor cable to the sensor and to the digitizer (Q330-series or Rock-series). The sensor will power-ON over the course of a few seconds. The current range setting, and current AUTOZERO status (ON or OFF), will be signified by the LEDs.

Wait until the LED extinguishes (about 20 seconds). Pressing the LED once (for between 0.2 and 2 seconds) will re-illuminate the LED. It will also activate the button system for further control (as discussed previously).

Upon power-ON, or a RESET event, the sensor will output an analog signal on its range indicator lines. These will be recorded by the digitizer. The user can verify the current range setting by monitoring these values, or by analyzing the pulse-train sequence, shown in Figure 4.

At this point, the sensor is operational.

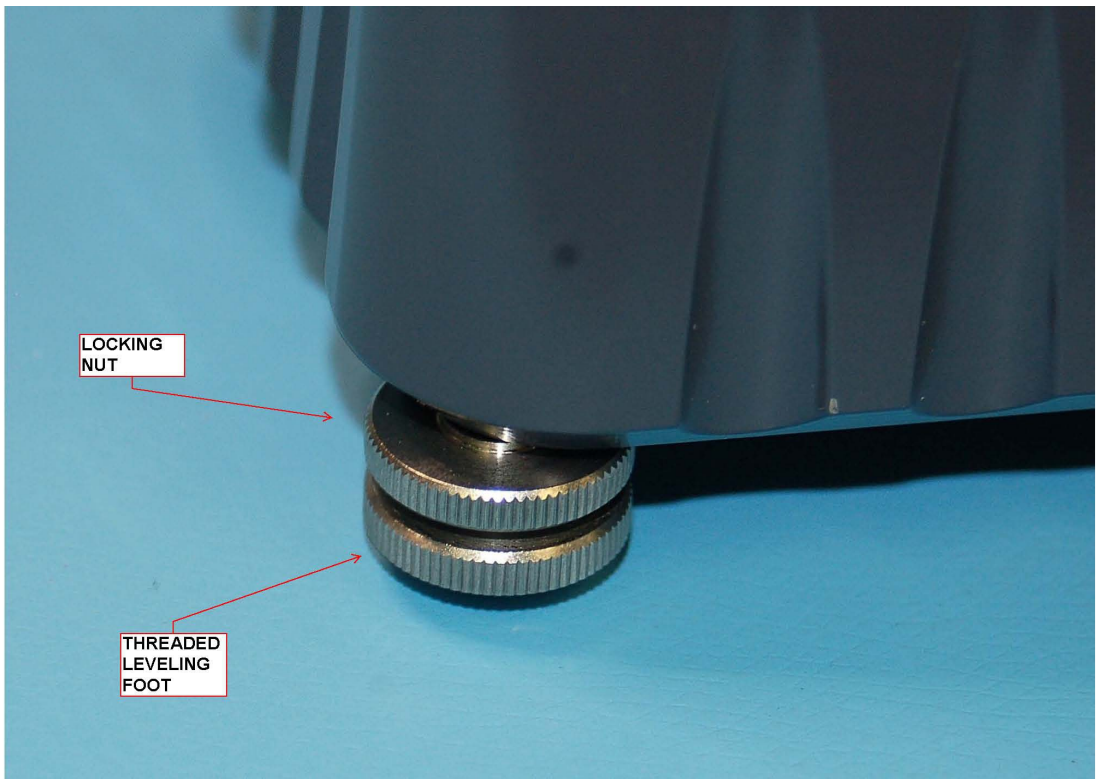

Figure 5. Details of leveling feet.

Operational Details

Choice of Digitizer

The instantaneous dynamic range of the sensor is greater than that of any modern seismic digitizer, particularly when operating on the 4g and 2g ranges. 26-bit digitizers (such as the Q330HR) are preferred for utilizing the greatest part of this range. More conventional 24-bit digitizers also work well, however, the self-noise of a properly installed sensor is well below that of the input noise of the digitizer. Some digitizers provide integrated preamplifiers. While these are useful for investigation of the exact levels of sensor self-noise, their use will greatly reduce the full-scale range of the sensor. This effectively defeats the purpose of a "strong motion accelerometer"! ***Typically, the best system performance will be achieved by use of a Q330HR (26-bit) digitizer, with its preamplifiers OFF.***

Full-Scale Range Selection

Sensor dynamic range is typically highest on the highest full-scale range settings (+/-4g and +/-2g), where the 1 Hz dynamic range is in excess of 160 dB. However, sensor self-noise typically drops with range setting (although noise on 0.5g and 0.25g ranges are practically identical). ***The choice of (peak) full-scale range should ensure that there is near-zero chance of clipping due to maximum local accelerations. Users should select ranges above the maximum expected signal.***

AUTOZERO Mode

The AUTOZERO system records and corrects the sensor offsets *in situ*. This correction cancels fixed mechanical offsets in the sensor element, as well as tilt-related offsets due to sensor mounting. It injects a separate feedback current that is automatically generated to cancel the observed offset. AUTOZERO is either OFF (standard mode), or ON. Any time that the sensor is RESET, or it experiences a Power-ON-RESET, or the AUTOZERO is explicitly set via the various control interfaces, the sensor re-calculates and corrects its offsets. When continuously powered, the sensor retains the same offset removal current setting.

AUTOZERO requires higher quiescent power consumption (about 120 mW extra), and it increases self-noise levels. Unless the user has special requirements (e.g., using a very low dynamic range digitizer requiring the use of input preamplifiers), ***we recommend leaving the AUTOZERO in its OFF state. Any modern digitizer, as well as many data analysis algorithms, are not affected by DC-offsets in the signals, or in the digital data.***

Calibration (CAL)

Calibration is seamlessly supported through the digitizer connection. This includes a digital control line for connecting the (differential) calibration input signals to the sensor elements, and use of the voltage sources provided by the digitizer. For the EpiSensor2 (with DC-320+Hz bandwidth), random noise is an excellent calibration stimulus source.

Retention of Settings

The current full-scale range and AUTOZERO status (ON or OFF) is stored in EEPROM within the

sensor. These settings are updated whenever the status is changed by the user (or the digitizer). Upon a system Power-ON-RESET, or simple RESET, the sensor is restored to the the stored operating configuration. The calibration status, however, is volatile. Following any RESET event, the calibration mode must be re-entered using either the digitizer enable line, or an RS-232 command.

Sensor Response Values

Each sensor element is trimmed during manufacture, to provide a standard scalar response (Volts/g) on each of the five (operating ranges). In addition, each sensor axis is trimmed to ensure that its response bandwidth falls within a set range (-3 dB amplitude point at or above 320 Hz).

The scalar responsivity (G) is stored on the "RESPONSE" page that is described below. A command query on this page ("status" command) will return the scalar response values for each element, at the current full-scale range setting.

The Episensor2 frequency response can be described well by a simple set of conjugate pole pairs:

P1 = -700+/-1250j (radians/second)
P2 = -1340+/-3350j (radians/second)

The full response is defined as:

$$V(s) = \frac{G\,|P1|^2\,|P2|^2}{(s - P1)(s - P1^*)(s - P2)(s - P2^*)}$$

where G is the scalar responsivity (Volts/Standard g). (A standard g is defined as 9.81 m/sec^2).

Input Power Requirements

The EpiSensor2 operates from a wide (9-36V) input supply range. The quiescent power consumption (input power in the absence of significant seismic signals, with all LED indicators OFF, and with the RS-232 interface disconnected) is under 350 mW. Typically, the current draw is 25 to 28 mA @ 12V.

Power consumption is temporarily higher when LEDs are illuminated. Also, a persistent RS-232 connection increases power consumption by 10 to 20 mW.

Dynamic signals increase ***instantaneous*** power consumption. A typical rule of thumb is that for every 1g increase in input signal, per axis, power consumption increases by about 150 mW. At the absolute highest drive levels: 4g simultaneously on each of the three axes (unheard of from natural seismic sources), this excess power consumption would amount to about 1.8W. Naturally, dynamic signals impose lower mean energy demands. Also, exact temporal correlation between signals on the three axes is very unlikely. The absolute maximum dynamic input power is almost certainly lower than 1.8W. As such, the maximum input power requirements, quiescent plus dynamic, is expected to be under 2W. As such, a low impedance, 2W power supply is sufficient for the EpiSensor2.

Like most analog sensor products, the power input has a moderate level of input capacitance (a few

tens of microfarads). Any competent power source should be able to provide the instantaneous inrush currents (a few amps over a few tens of microseconds) required to charge these capacitors. Battery power is ideal. Also, the EpiSensor2 has been fully tested using the integral sensor power supplies provided by the Quanterra Q330-series, and Kinemetrics Rock-series digitizers.

Although the sensor electronics employ multiple stages of power supply (noise) rejection, it is always best to use clean, well-regulated input power.

Thermal Isolation

In order to generate the highest quality data (with low noise and drift at low frequency), the EpiSensor2 should be operated in an environment with high thermal stability. At a minimum, the sensor should be covered with a foam box in order to reduce the effects of air flow around it. Higher levels of thermal isolation can be achieved by increasing the effective thermal mass of the instrument. Among the options for this are sand-packing and the use of interlocking “water bricks”. Please contact Kinemetrics to discuss the technical details related to increasing thermal isolation.

RS-232 Command Line Interface

The sensor provides an isolated RS-232 interface operating in a very standard mode: 9600 baud, 8 data bits, 1 start bit, No parity. The interface does not support hardware or software handshaking. Connection within a typical DB9 COM connector is:

DB9 Pin	***RS-232 Line Description***	***Souriau Plug Contact***
2	**Tx**	**A**
3	**Rx**	**B**
5	**GND**	**C**

The RS-232 cable (PN: “Epi2.0 320002-1.5) provides a convenient connection (Souriau-to-DB9) that supports this interface.

A standard terminal emulator program (such as PuTTY) can be used to communicate with sensor. Note that the emulator should be set so that Control-H represents the backspace key. This will allow the sensor to respond properly to backspaces entered by users in the terminal.

After power-ON, the sensor will output sensor specific information and will leave the user at the Main page prompt. The commands are not case-sensitive. All keyboard commands are completed by hitting the “Enter” key. On any page, the “?” character will list the specific commands available on any page.

Main Page Commands

```
Epi2.0 Main Menu:MAIN> ?
Commands:
  OPERATE: Selects Sensor Control Menu
  RESPONSE: Selects RESPONSE Menu
  SAFE: Disables Sensor System Control
  ENABLE######: Enables Sensor System Control(###### is Password)
  STATUS: Print System Status Info
  ?: Help For Info on specific Command

Seconds=4179
Ticks=42
Epi2.0 Main Menu:MAIN>
```

The "status" command prompts the system to print out a set of system-related data:

```
Epi2.0 Main Menu:MAIN> status

Kinemetrics Episensor2.0 Serial Number 106

Episensor2.0 Connector Board Number: 4035
Episensor2.0 Main Board Number: 2014
Episensor2.0 Top Board Number: 3012

Episensor2.0 MSP430 Code Revision 3.02.00

X Sensor Module Serial Number:  Number 2006
Y Sensor Module Serial Number:  Number 2056
Z Sensor Module Serial Number:  Number 1010

Sensor FS Range is 4g
AUTOZERO is OFF
CAL is OFF

Seconds=4237
Ticks=1002
Epi2.0 Main Menu:MAIN>
```

Password Protection

The system must be enabled to allow access to other menus. ***The enable command is "enable12345".***

Operate Page Commands

```
Epi2.0 Operate Menu:OPERATE> ?
Commands:
  4G: Sets Sensors to 4g FS Range
  2G: Sets Sensors to 2g FS Range
  1G: Sets Sensors to 1g FS Range
  0.5G: Sets Sensors to 0.5g FS Range
  0.25G: Sets Sensors to 0.25g FS Range
  AUTOZEROON: Turns ON Autozero Mode
  AUTOZEROOFF: Turns OFF Autozero Mode
  CALON: Enables Sensor CAL
  CALOFF: Disables Sensor CAL
  STATUS: Prints Sensor Operating Mode Values
  SAFE: Disables Sensor System Control
  RETURN: Return to Previous Menu
  ?: Help for info on specific command

Seconds=4302
Ticks=369
Epi2.0 Operate Menu:OPERATE>
```

The “status” command prompts the system to print out a set of system-related data:

```
Epi2.0 Operate Menu:OPERATE> status

Sensor FS Range is 4g
AUTOZERO is OFF
CAL is OFF

Seconds=4364
Ticks=36
Epi2.0 Operate Menu:OPERATE>
```

Response Page Commands

```
Epi2.0 Response Menu:RESPONSE> ?
Commands:
  SCALE: Shows Scale Factor for Each Range and Axis
  STATUS: Prints Current Sensor Response Values
  SAFE: Disables Sensor System Control
  RETURN: Return to Previous Menu
  ?: Help for info on specific command

Seconds=4421
Ticks=222
Epi2.0 Response Menu:RESPONSE>
```

The "status" command prompts the system to print out a set of system-related data:

```
Epi2.0 Response Menu:RESPONSE> status

Sensor FS Range is 4g
X Sensor Module Scale Factor is 5001 mV per Standard g
Y Sensor Module Scale Factor is 4998 mV per Standard g
Z Sensor Module Scale Factor is 4999 mV per Standard g

AUTOZERO is OFF
CAL is OFF

Seconds=4447
Ticks=789
Epi2.0 Response Menu:RESPONSE>
```

Activity Timeout and Disable

Once enabled, the sensor will automatically be disabled after 3600 seconds of inactivity (no commands entered), or on a RESET or POWER-ON-RESET event. When disabled, the sensor is returned to the Main Page. The user would then need to re-enable the system to access other pages. System control is also disabled with a "safe" command entered on any page.

Seconds and Ticks

The sensor measures and reports elapsed time since its last RESET or Power-ON-RESET event. "Seconds" are the number of elapsed seconds. "Ticks" are a sub-second measure approximately equal to 1 msec.

Shipping and Handling

While it is called a “strong motion” accelerometer, the EpiSensor2 is still a precision instrument that should be handled with care. Avoid strong shocks during shipment and installation. It is recommended that customers utilize the original foam-filled packaging during any shipment and transport.

Contact Kinemetrics

Please contact Kinemetrics with any questions or issues regarding this product.

1-626-795-2220 (Phone)
support@kmi.com
www.kinemetrics.com

EpiSensor2 Specifications

Architecture: Triaxial, force-balance accelerometer with capacitive displacement transducer; X/Y/Z (non-Galperin) configuration

Centering: Optional AUTOZERO mode to allow removal of static sensor offsets (zeroed to within ±0.005 g)

Full-scale Range: Electronically (and remotely) selectable range: ±4 *g*, ±2 *g*, ±1 *g*, ±0.5 *g*, and ±0.25 *g* (peak)

Bandwidth: DC to >320 Hz (-3 dB point)

Dynamic Range:
(Integrated RMS)
166 dB @ 1 Hz over 1 Hz bandwidth
155 dB, 3 to 30 Hz

Non-linearity: < 0.015% total non-linearity

Hysteresis: < 0.005% of full scale

Cross-axis Sensitivity: < 0.5% total

Offset Temperature Coefficient
Horizontal sensor: 60 μ*g*/°C, typical
Vertical sensor: 320 μ*g*/°C, typical

Power Supply Voltage: 9 to 36 V DC isolated input
Power Consumption: <350 mW typical quiescent
Power Protection: Reverse-voltage and over-/under-voltage protected
Over-current protection with self-resetting feature

Isolation: Input power, serial interface, and digital control lines galvanically isolated from sensor ground

Grounding: Case ground connected to dedicated cable line for automatic connection to digitizer grounding lug

Control Interfaces

Digital ENABLE Lines: Dedicated, isolated lines for control of full-scale range, CAL ENABLE and AUTOZERO ON/OFF

RS-232 Interface: TIA/EIA-232-F compliant, isolated RS-232 with full command-line control of all sensor parameters and functions

Pushbutton Switch and Status LEDs: Local selection and display of full-scale range, AUTOZERO, and CAL status

Full-Scale Range Remote Signaling

Mass Position Interface: Range-dependent voltage output on traditional broadband sensor mass position lines

Signal Line Interface: Time/Amplitude-coded pulse train superimposed on differential signal lines: signaled upon full-scale range change, or upon power-ON reset

Electrical Interface

Connector: Souriau 851-07C16-26P50-A7-44 Receptacle

Acceleration Output: Up to 40 Vpp differential

Output Impedance: Under 2 x 100 Ohms

Calibration Input: Protected, differential input for exciting all three axes simultaneously; +/-15V Peak; acceleration-equivalent stimulus

Cable: Right-angle molded plug connects to sensor; Inbound end connects directly to Q330-class digitizers; Y-plug for RS-232 interface

Physical and Environmental

Housing: Epoxie-painted, Ni-plated Aluminum; scratch and crack resistant

Leveling: Integrated bubble level and fine-pitch, adjustable leveling screws

Mounting: Single, central bolthole passing through sensor; non-interfering with leveling

Size: 5.0”L x 5.25”w X 3.25”H (12.7 cm x 13.3 cm x 8.3 cm)

Weight: 4 Pounds

Operating Temperature: -40°C to 60°C

Storage Temperature: -65°C to 75°C

Humidity: 0 to 100%

Weather Resistance: O-ring sealed to IP-67+

RS-232 Remote Commands (password-protected access)

Full-scale range setting
Calibration ENABLE
AUTOZERO ON/OFF
System Response Values
System Information/Serial Numbers/Hardware and Firmware Revisions